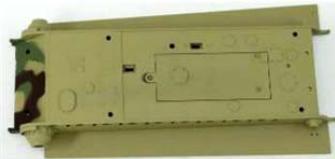
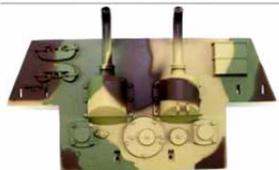
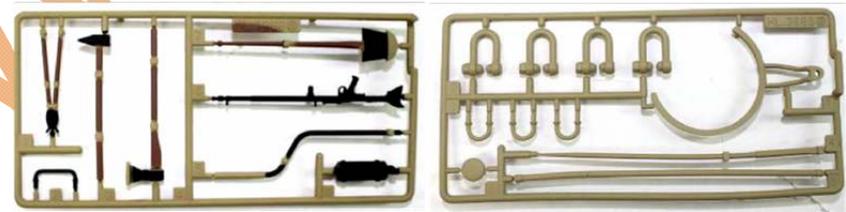
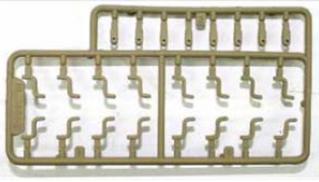
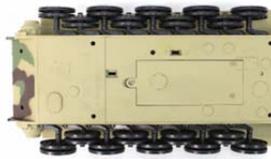


編號/ 名稱	圖片	價格	編號/ 名稱	圖片	價格
3888A-001 車面		元/個 (不含前燈) (需噴漆)	3888A-002 車底		元/個 (含電池蓋) (需噴漆)
3888A-003 炮塔面		元/個 (裝好子彈倉) (需噴漆)	3888A-004 車底後板		6元/個 (需噴漆)
3888A-005 炮塔底		元/個	3888A-006 炮管固定座		元/個 (需噴漆)
3888A-007 炮塔防護盾		元/個 (需噴漆)	3888A-008 擋泥板		元/套 (每套含左右各1片) (需噴漆)
3888A-009 主輪 (內部輪)		元/套 (每套含 8 粒, 每粒由兩片組) (需噴漆)	3888A-010 主輪 (外部輪)		元/套 (每套含 10 粒, 每粒由兩片組合) (需噴漆)
3888A-011 驅動輪		元/對 (需噴漆)	3888A-012 誘導輪		元/對 (需壓銅套, 每個鎖上螺絲 2.0*14mm, 3 粒) (需噴漆)
3888A-013 前進燈		元/粒 (含燈) (需噴漆)	3888A-014 塑膠搖臂		元/套 (每套 18 條)
3888A-015 塑膠履帶		元/對 (每條 44+44 節)	3888A-016 塑膠履帶節		元/對

編號/ 名稱	圖片	價格	編號/ 名稱	圖片	價格
3888A-017 炮塔倉蓋		元/套 (需噴漆)	3888A-018 坦克長座蓋		元/套 (需噴漆)
3888A-019 機 關槍座及 壓件		元/個	3888A-020 誘 導輪固定 座		元/對
3888A-021 車面後掛鉤		元/套 (每套 4 個)	3888A-022 車 底後板固 定件		元/對
3888A-023 BB 彈波箱 連接件		元/個	3888A-024 BB 彈波箱進 彈連接件		元/個
3888A-025 後板千斤頂		元/個 (噴啞黑色)	3888A-026 冒煙管		元/對 (含接頭)
3888A-027 千斤頂固定件 (金屬件發 黑)		元/對 (含 2.3*5PB 4 粒)	3888A-028 炮管頭		元/個 (需噴漆)
3888A-029 自 裝配件 A 和 B					元/套 (每套含 A 和 B 各一片)  (需噴漆)
3888A-030 輪罩 (自裝配件 C 和 D)					元/套 (含主輪罩 4 個長、5 個短、 驅動輪罩 2 個、 誘導輪罩 2 個)  (需噴漆)

編號/ 名稱	圖 片	價 格	編號/ 名稱	圖 片	價 格
3888A-031 自裝配件 E (炮塔配 件)		元/片 (需噴漆)	3888A-032 車面繩索		元/套 (含 3 條, 需 噴漆)
3888A-033 履帶連接軸		元/條 (一端帶花)	3888A-034 減震扭簧		元/套 (每套共 18 條, C2631)
3888A-035 炮 管		元/條 (車床件)	3888A-036 炮 管連 BB 彈 波 箱 (需預定)		元/套 (含 BB 彈波 箱、炮 管等配 件)
3888A-037 炮管連炮塔 (需預 定)		元/套 (含升降、壓 簧、開關、BB 彈 波箱、炮管等 配 件)	3888A-038 車面 (裝好配件) (需預定)		元/套 (含轉向等波 箱、車 面前燈、 八線插座等 配 件)
3888A-039 炮塔連車面 (需預 定)		364 元/套 (含升降、BB 彈、轉向等波 箱、炮管、車面 等配件)	3888A-040 帶主輪車底 (需預定)		元/套 (含內外主 輪、主輪 搖臂、螺絲、墊片等 部件, 不含誘 導輪和 驅動 輪)
3888A-042 說明書		元/本	3888A-045 金屬驅動輪 (鋅合金)		元/對 (每套含 2 個 輪)
3888A-046 金屬誘導輪 (鋅合金)		元/對 (每套含 2 個 和 3*12 螺絲 6 粒)	3888A-047 金屬履帶 (鋅合金)		元/對 (每套 2 條) (1.7KG)